


Classic klädhängare

	Classic klädhängare
Alla längder	1 klädhängare
600–1000	4 väggdistans + 2 skruvpåse 2-pack skruvstift M6x80 med plugg
1200	6 väggdistans + 3 skruvpåse 2-pack skruvstift M6x80 med plugg
600	10 knoppar + 6 skruvar M6X25
800	14 knoppar + 10 skruvar M6X25
1000	18 knoppar + 14 skruvar M6X25
1200	22 knoppar + 16 skruvar M6X25

Monteringsanvisning:

- 1** Placera klädhängaren mot väggen där du vill montera den. Se till att den är rak och markera de två yttersta hålen upptill och nedtill, så att du vet var du ska borra eller skruva fast skruvstiften. Om du har en klädhängare som är 1200 mm bred, ska du även markera hålen i mitten av klädhängaren både upptill och nedtill för extra stabilitet.
OBS! Tänk på att skruva in skruvstiftet rakt.
- 2** Skruva fast knopparna i klädhängaren med skruvarna M6x25, men vänta med de två yttersta knopparna uppe och nere. Om du har en klädhängare som är 1200 mm bred, ska du även vänta med knoppen i mitten både upptill och nedtill tills klädhängaren är monterad på väggen.
- 3** Sätt väggdistanserna på skruvstiften. Placera sedan klädhängaren på skruvstiften.
- 4** Skruva fast de två yttersta knopparna uppe och nere direkt på skruvstiften för att låsa klädhängaren på plats.

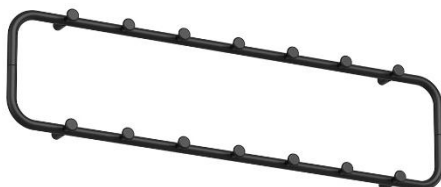

Classic coat hanger

	Classic coat hanger
All lengths	1 coat hanger
600–1000	4 wall spacers + 2 screw set: 2-pack M6x80 screw studs with wallplugs
1200	6 wall spacers + 3 screw set: 2-pack M6x80 screw studs with wallplugs
600	10 knobs + 6 screws M6x25
800	14 knobs + 10 screws M6x25
1000	18 knobs + 14 screws M6x25
1200	22 knobs + 16 screws M6x25

Assembly instructions:

- 1 Place the coat hanger against the wall where you want to mount it. Make sure it is level, and mark the top and bottom holes at each end. This will show you where to drill/screw in the screw studs. If you have a 1200 mm wide coat hanger, you should also mark the holes in the center, both at the top and bottom for extra stability.
Note! Make sure to screw in the screw stud straight.
- 2 Attach the knobs to the coat hanger using the M6x25 screws, but wait with the two outermost knobs at the top and bottom. If you have a 1200 mm wide coat hanger, also wait with the center knob both top and bottom until the coat rack is mounted on the wall.
- 3 Place the wall spacers onto the screw studs. Then position the coat hanger onto the screw studs.
- 4 Finally, fasten the last knobs directly onto the screw studs to lock the coat hanger in place.

